









6b Configuring the remote control handset

Ensure that the power switch on the unit is in the **OFF** position (see **Figure G**)



Check the power supply cable is plugged in (see **Figure G**) and mains is turned on, but leave the switch on the unit turned off for the moment.

- 1** Press and hold down the  button and turn on the unit power switch.
- 2** The  LED should light red.
- 3** Release the  button.
- 4** Press and hold down the  button again.
- 5** The  LED should light orange.
- 6** Keeping the  button held down, press either button on the handset. The orange LED should flash.
- 7** Release the HANDSET button.
- 8** Wait for the orange LED to stop flashing and light constant orange
- 9** Now press the HANDSET button again. The orange LED should now go out.
- 10** Release the  button

NOTE: To set up another handset repeat stages 4–10. When you have finished setting up the handset(s) continue with stage 11.

- 11 Configuration of handset buttons** – with the  button released, press the handset button that you wish to use to operate the door. The  LED should light orange to acknowledge receipt of the signal.
In addition, if the left button is pressed the  LED will flash red, if the right button is pressed the  LED will flash green.
If you want to change buttons, press both buttons on the handset simultaneously to reset (the  LED will flash orange) and repeat this stage.

Repeat this stage to configure additional handsets.

- 12** Press the  button to store your settings.
- 13** The  LED should show green/flashing green, indicating that the handset(s) have been successfully configured.